 


Visiosonic™


Professional DJ Products
Made by Pro DJs for Pro DJs™

PCDJ™ Digital 1200sl™
Mini Tower

QUICK START MANUAL

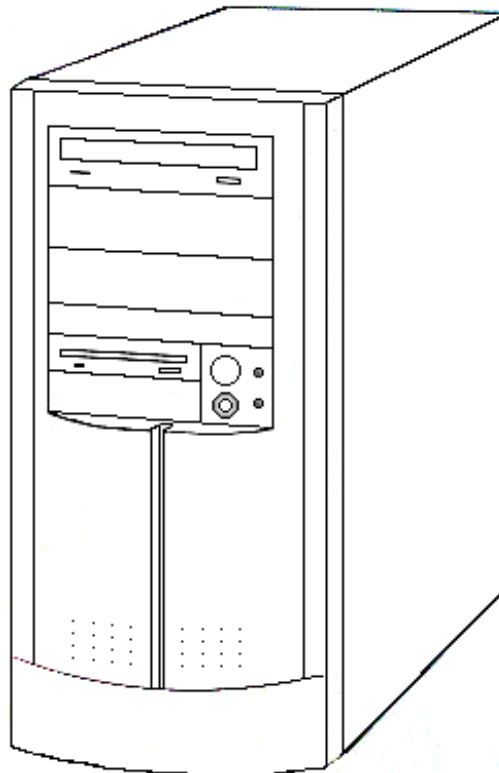

Safety Information

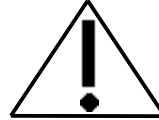

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE ANY COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.

The lightning flash with arrow symbol within the equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this appliance.

CAUTION

FOR USA & CANADIAN MODELS ONLY

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS (POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture. Electrical equipment should NEVER be kept or stored in a damp environment.

LINE VOLTAGE SELECTION

The desired voltage can be set with the Voltage Switch located on the back panel of the Mini Tower unit by using a screw driver.

115V



230V



Getting Started

Congratulations ...

on receiving the Mini Tower and the PCDJ Digital 1200sl MP3 system for professional DJs. We at Visiosonic would like to thank you for purchasing this incredible system which offers the latest technology that empowers DJs like never before.

This booklet is designed to give you quick-start assistance in setting up your Mini Tower. Read this entire booklet and follow the steps required. You'll have the system up and running in just a few minutes. After you've completed the Quick Start Manual, proceed to the ***PCDJ Digital 1200sl User's Manual*** to learn how to utilize all of the many great features that are now available to the professional DJ.

List of Contents

- 1 - Mini Tower Unit
- 1 - Phone Cable
- 1 - Power Cord
- 2 - Audio Cables/RCA™
- 1 - Windows® 98 CD Packet
- 1 - Sound Blaster Live!™ Installation CD
- 1 - ASUS ME-99 USER'S MANUAL 1.03
- 1 - PCDJ Digital 1200sl Software program

Personal Requirements


Along with the PCDJ Digital 1200sl Software and Mini Tower, you will need a **monitor**, **keyboard** and **mouse** to be able to run the system. The following segment shows how to connect these peripheral computer devices to the Mini Tower.

NOTE: You can purchase a keyboard, mouse and monitor at any major computer store or from our web site.

Setting Up

Connecting up to your Mini Tower is very simple. Just follow the steps below and refer to the diagram as needed.

Mini Tower Diagram (Rear View)

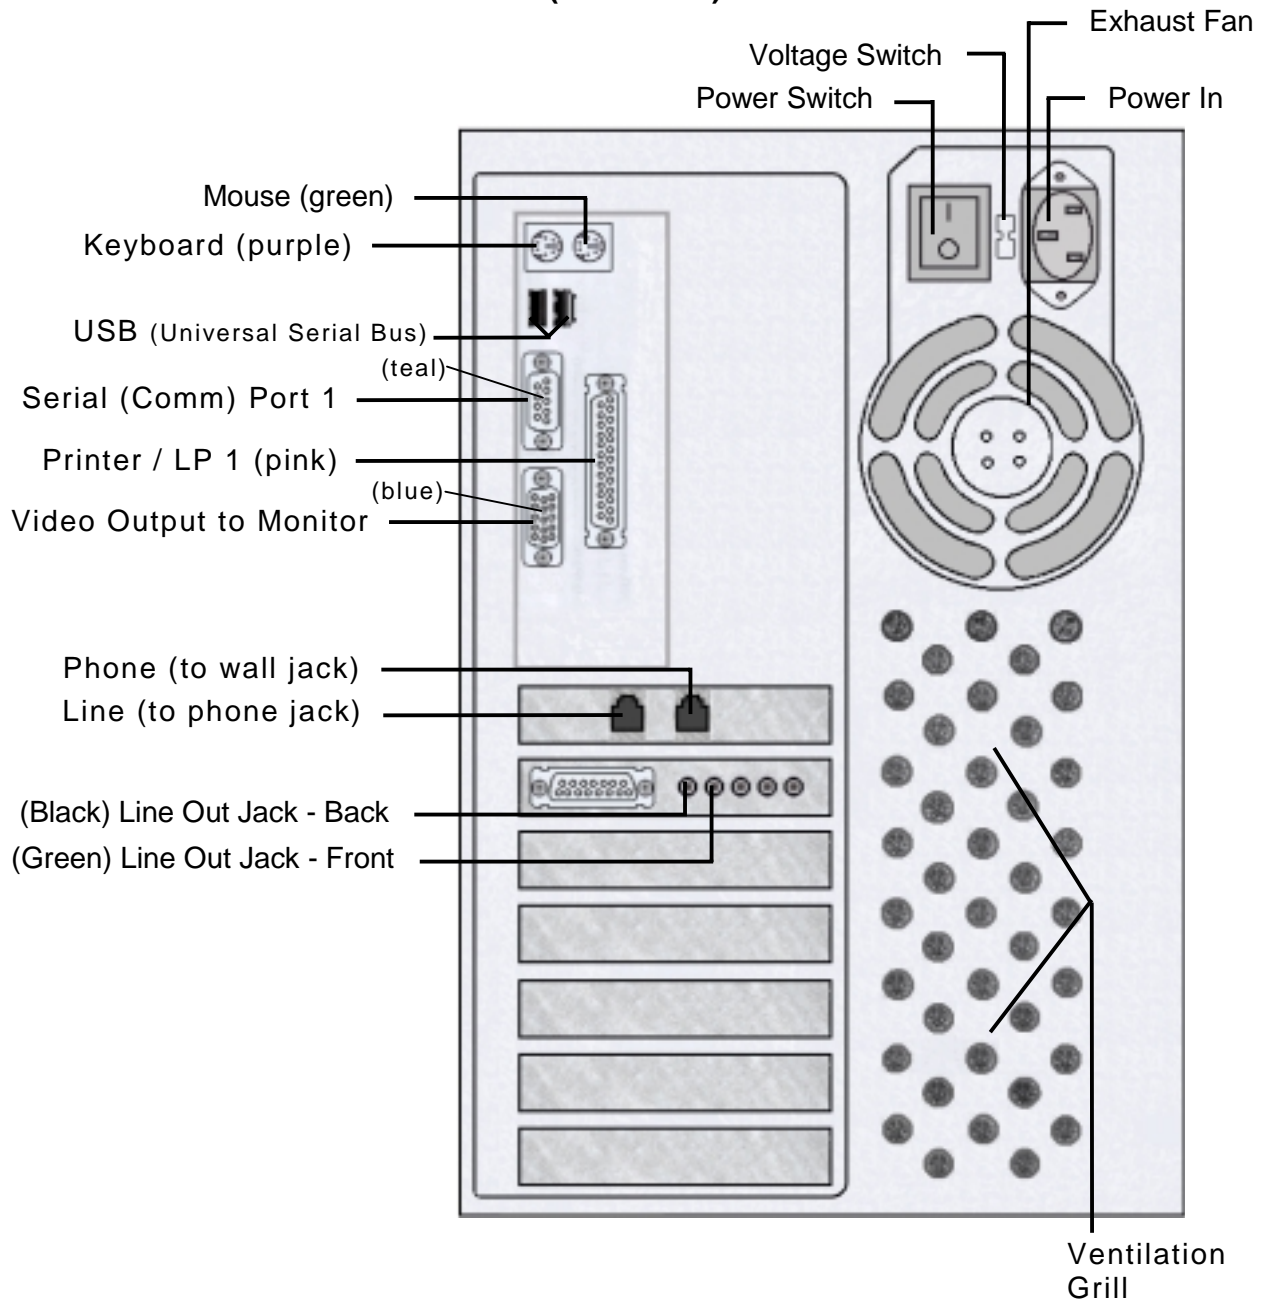

Setup Procedure

NOTE: The Exhaust Fan and Ventilation Grill exist to keep the equipment from overheating. Their cooling purpose is very important to the safety, longevity and performance of the unit. Make sure these items are never blocked and can always receive ample fresh air.



STEP 1. Set the Power Switch to the OFF (O) position in the back of the Mini Tower.



STEP 2. Connect your monitor's cord to the (blue) "Video Output to Monitor" socket.



STEP 3. Connect your mouse's cord to the (green) Mouse socket.



STEP 4. Connect your keyboard's cord to the (purple) Keyboard socket.



STEP 5. Take one of the audio cables supplied with the Mini Tower and put the 1/8" male stereo plug into the (black) Line Out Jack of the Sound Blaster Live! sound card. This is the back Line Out.



NOTE: The sound card has "front" and "back" Line Outs in order to help you configure your entire setup with consistency. For example, when the main speakers are properly connected to the Main outputs of your audio system and your monitor speakers are connected to the Monitor outputs, if you cross the wires at the sound card, the outputs would be opposite in the speakers.



STEP 6. Place the left and right RCA plugs of this audio cable into the left and right monitor (back) speaker jacks of your audio system.



STEP 7. Take the second audio cable supplied with the Mini Tower and put the 1/8" male stereo plug into the (green) Line Out Jack of the Sound Blaster Live! sound card. This is the front Line Out.



STEP 8. Place the left and right RCA plugs of this audio cable into the left and right front (main) speaker jacks of your audio system.



STEP 9. If you have an Internet Provider (IP), connect your telephone cord from the wall to the "Line" jack. (The "Phone" jack of the modem is generally not used for DJs)

NOTE: The phone jacks on the rear of the Mini Tower may be in different order than the diagram shows. Observe the icon next to each jack to verify which one is the “Line” jack.

STEP 10. Connect the Mini Tower’s power cord into the “Power In” socket and plug it into your home’s wall socket.

NOTE: The Mini Tower you received is designed to work with either 110 or 220 voltage. It comes preset for the 110 voltage use. If you require 220 voltage, you can change the setting in the Voltage Switch by using a screwdriver and switching the setting from “115” to “230”. Make sure the power is disconnected before changing the settings.

A Final Note

Now that you have successfully connected up with your Mini Tower unit, it’s time to move to the *PCDJ Digital 1200sl User’s Manual* and begin learning how to utilize this powerful MP3 system.

Make sure that you fill out your License and mail it back to Visiosonic right away.

If you have any questions that need addressing at this point, you can speak to a Visiosonic Support Representative toll free at: 877-778-4746 or e-mail to: support@visiosonic.com with your detailed question. The response time for e-mail is usually within one working day.